

HOBOWare Pro is Onset's flagship graphing and analysis software package for HOBO data loggers. It allows you to view, graph and analyze data with point-and-click simplicity. You can easily set up your application in a matter of minutes, quickly read out and plot data, and export to spreadsheets for further analysis.

**Key Advantages:**

- Powerful graphing and analysis capabilities
- Enhanced plotting preferences- font, line style, y-axis scaling, and saving settings
- Time-saving features automate launching and offloading multiple loggers
- Presentation quality graphs
- Easy file management
- Advanced data delivery options via FTP, email

**HOBOWare Pro Software  
BHW-PRO-CD**

 **HOBOWare Pro**  
**30-Day FREE TRIAL**  
[Visit onsetcomp.com for details](http://www.onsetcomp.com)




Logged data can be presented in tabular format, in addition to graphs.



Data can be easily exported to spreadsheets within a few clicks.



Zoom tool lets you focus in on data of interest.

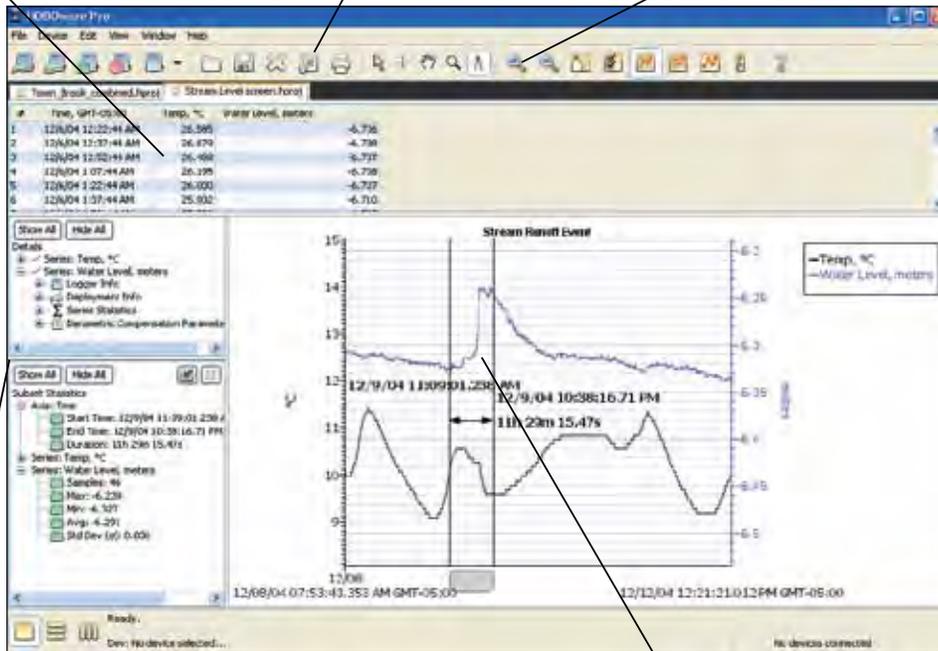

The Series Statistics pane includes the number of samples, average reading, and sample time.



Powerful analysis tools extract key information from logged data.

**Easy Logger Setup and Readout**– HOBOWare Pro makes it fast and easy to set up HOBO data loggers for deployment, and readout the loggers after data has been collected. Settings are configured using simple, intuitive windows.

HOBOWare also offers a number of Time-Saving Options that allow you to launch and offload multiple data loggers quickly by bypassing a number of default setup actions. This is ideal for projects involving multiple deployments of the same logger type.



**Data assistants** – Data Assistants are tools to simplify data analysis specific to your application. Data Assistants are included with HOBOWare Pro, such as Conductivity, Barometric Compensation, Linear Scaling, Pulse Scaling, kWh Assistant, Growing Degree Days, and Grains Per Pound.



Easy logger setup - select launch parameters and go!



### HOBOnode Manager

For use with HOBO ZW Series Data Nodes

- Get real-time graphs of your building data
- Receive text messages or email when conditions exceed thresholds
- Map deployed data nodes throughout your facility
- One-click data export to spreadsheet programs

See page 19 for more details

## Ordering Information

### Software

HOBOWare Pro Software (Windows/Mac)  
 USB Serial Adapter (for H Series)  
 Serial Interface Cable (for H Series)  
*HOBOWare includes USB interface cable.*

BHW-PRO-CD  
 ADAPT-SER-USB  
 CABLE-PC-3.5

*Onset also offers HOBOWare Lite which is an entry-level graphing and analysis package. See onsetcomp.com for more details.*

*HOBOWare software is available for download via the web. Visit onsetcomp.com for details.*

### HOBOWare Pro for Windows System Requirements

- PC: Windows 7 (Pro, Ultimate and Home Premium), Windows XP Pro, Windows XP Home, Vista Business, Vista Home Premium
- Sun Java Runtime Environment (JRE) 1.6.
- One of the following Internet browsers: Safari 4, Firefox 3 or greater, Microsoft Internet Explorer 8.0.
- Minimum screen resolution of 1024 x 768
- 1.8 GHz single core CPU, 1 GB RAM\*

### HOBOWare Pro Mac System Requirements

- Mac: OS X Versions 10.5.x and 10.6.x.
- Sun Java Runtime Environment (JRE) 1.6. Please note that version 1.6, also known as Java 6, is officially supported on OS X only on Intel Core 2 Duo processors
- One of the following Internet browsers: Safari 4, Firefox 3 or greater, Microsoft Internet Explorer 8.0.
- 1024 x 768 display resolution (minimum)
- 1.8 GHz single core CPU, 1 GB RAM\*

\* HOBOnode users require up to 2.9 GHz dual core and 3GB RAM. See onsetcomp.com for details.