

## Dry Media Differential Pressure Transducers

### **PX Series**



# Selectable Ranges, LCD Display, & Automatic Zero For Easy Operation

#### **FEATURES**

- Excellent tolerance to overpressure & vibration reduces field failures
- High accuracy digital sensor maintains calibration and reduces callbacks
- High reliability sensor technology for long-term maintenance-free operation
- Selectable ranges and scales reduce setup time & number of models to stock
- Microprocessor-based design allows for digitally profiled sensor increasing product accuracy and reliability
- Circuit protection avoids damage due to incorrect input wiring
- Monitors positive and negative pressure for application versatility
- Flexibility: standard and fast response modes
- LCD is ideal for set-up, troubleshooting and measuring
- Ceramic capacitive sensing element...highly stable linear output, reducing offset errors

#### DESCRIPTION

The digital **PX Series** differential pressure transducers utilize highly accurate, microprocessor profiled sensors and an advanced ceramic capacitive sensing element. Designed to monitor duct and room pressure in commercial buildings, the PX Series offers exceptional job-site flexibility. PXP and PXD models feature four field-selectable ranges. The PXU features seven field-selectable ranges, allowing just one model to cover applications for 0-0.1" to 0-10" W.C. The directional mode jumper is used to configure the transducer in uni-directional or bi-directional mode for room and building static pressure applications. All models feature a pushbutton and digital input terminal to zero the output. The microprocessor is programmed to reduce accidental zero adjustment during normal operation.

#### **SPECIFICATIONS**



Media Compatibility	Dry air or inert gas				
Input Power	Class 2; 12-30VDC, or 24VAC nominal; 2-wire: 20mA max.; 3-wire: 30mA max.				
Output	Field-selectable: 2-wire, loop-powered 4-20mA (DC only, clipped & capped), or 3-wire 0-5V/0-10V *				
PRESSURE RANGES					
PX: 01 Uni-directional Bi-directional	0.1/0.25/0.5/1.0" W.C. F.S., switch selectable ±0.1/±0.25/±0.5/±1.0" W.C. F.S., switch selectable 25 Pa/50 Pa/100 Pa/250 Pa, F.S., switch selectable ±25 Pa/±50 Pa/±100 Pa/±250 Pa, F.S., switch selectable				
PX: 02 Uni-directional Bi-directional	1.0/2.5/5.0/10" W.C. F.S., switch selectable $\pm 1.0/\pm 2.5/\pm 5.0/\pm 10$ " W.C. F.S., switch selectable 0.25 kPa/0.5 kPa/1.0 kPa/2. 5 kPa, F.S., switch selectable $\pm 0.25$ kPa/ $\pm 0.5$ kPa/ $\pm 1.0$ kPa/ $\pm 2.5$ kPa, F.S., switch selectable				
PXU: 05 Uni-directional Bi-directional	0.1/0.25/0.5/1.0/2.5/5/10" W.C. 25 Pa/50 Pa/100 Pa/250 Pa/0.5 kPa/1 kPa/2.5 kPa F.S. switch selectable ±0.1/0.25/0.5/1.0/2.5/5/10" W.C. 25 Pa/50 Pa/100 Pa/250 Pa/0.5 kPa/1 kPa/2.5 kPa F.S. switch selectable				
Response Time	Standard: T95 in 20 sec, Fast: T95 in 2 sec, switch selectable				
Mode	Unidirectional or bidirectional, switch selectable				
Display (option)	Signed 3-1/2 digit LCD, indicates pressure, overrange indicator				
Proof Pressure	3 psid (20.6 kPa)				
Burst Pressure	5 psid (34.5 kPa)				
Accuracy	±1%F.S. of selected range (combined linearity & hysteresis)				
Temperature Effect	1" (250 Pa) models: 0.05%/°C; 10" (2.5 kPa) models: 0.01%/°C; (Relative to 25°C) 0° to 50°C (32° to 122°F)				
Zero Drift (1-year)	1" (250 Pa) models: 2.0% max.; 10" (2.5 kPa) models: 0.5% max.				
Zero Adjust	Pushbutton auto-zero & digital input (2-pos terminal block)				
Operating Environment	0°- 60°C (32° to 140°F); 0 to 90% RH noncondensing				
Fittings	Brass barb; 0.24" (6.1 mm) o.d.				
Physical	UL 94 V-0 Fire Retardant ABS				

EMC Conformance: Low voltage directive 2006/95/EC; EMC directive 2004/108/EC. EMC Special Note: Connect this product to a DC distribution network or an AC/DC power adaptor with proper surge protection (EN 61000-6-1:2007 specification requirements).

#### **APPLICATIONS**

- Static pressure in building, duct or room applications
- Variable air volume system control
- Filter status monitoring
- Clean rooms, hospitals, fume hoods, computer rooms, and other very low differential pressure applications




<sup>\*</sup> Minimum input voltage for 4-20mA operation: 250  $\Omega$  loop = 13VDC; 500 $\Omega$  loop = 19VDC


**PX Series Pressure** 


#### **WIRING DIAGRAMS**

3-wire, 0-5V/0-10V

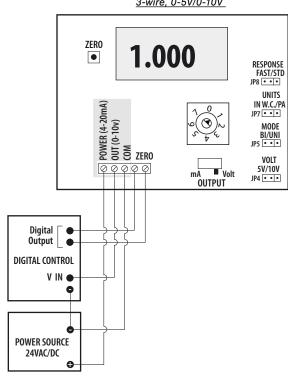

#### **DIMENSIONAL DRAWINGS**

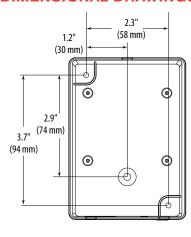

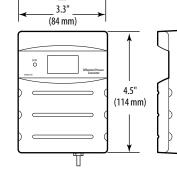

2.2" (55 mm)

> Note: Probe is available on the PXD and PXU models. Probe is not factory-installed on the PXU models.




Response

s

s



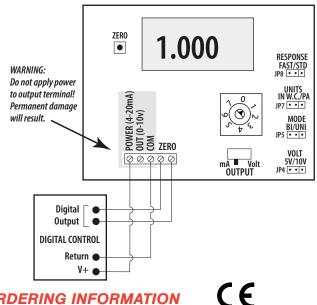



	PX01		PX02		PX05	
Rotary Switch Position	Inches W.C.	Pascal	Inches W.C.	Pascal	Inches W.C.	Pascal
0	0.1	25	1	250	0.1	25
1	0.25	50	1	250	0.25	50
2	0.5	100	1	250	0.5	100
3	1	250	1	250	1	250
4	1	250	2.5	0.5kPa	2.5	0.5kPa
5	1	250	5	1kPa	5	1kPa
6	1	250	10	2.5kPa	10	2.5kPa
7	1	250	10	2.5kPa	10	2.5kPa

NIST

N = NIST

#### ORDERING INFORMATION

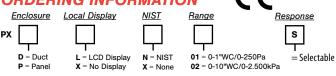

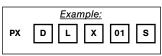

AA05



Local Display

L = LCD Display

X = No Display

PXU



**Range** 

05

= 0-10"WC/0-2.500kPa

Example:

05

# AA63

#### **ACCESSORIES**

Room and duct static pickup tubes (AA05, AA06, AA07) Pitot tube kits (AA18, AA19, AA20) Wall plate remote pickup (AA56) Replacement covers (AA62, AA63)