

# Monnit Wi-Fi Temperature Sensor

# **Technical Overview**



# **General Description**

The Monnit Wi-Fi Temperature Sensor uses a thermistor to accurately measure temperatures from -40°C to 85°C. An integrated 802.11 b/g radio allows the sensor to work with any existing Wi-Fi network. Monnit Wi-Fi sensors can be easily programmed with your Wi-Fi network's WEP or WPA(2) security via the free MoWi Setup Utility (PC application) and a MoWi USB programming cable (available in the <u>Monnit web store</u>).

### Features

- Accurate to ± 1° C (± 1.8° F).
- Increased accuracy by user calibration to ± 0.25° C (± 0.45° F).
- Logs data if Wi-Fi network is disrupted.
- Free iMonnit basic online wireless sensor monitoring and notification system to configure sensors, view data and set alerts via SMS text and email.

# **Principle of Operation**

The Monnit Wi-Fi Temperature Sensor outputs the ambient temperature in degrees Fahrenheit or Celsius. It is programmed to sleep for a user-specified time interval (heartbeat) and then wakeup, send power to the NTC Thermistor, wait for the reading to stabilize, calculate the temperature and transmit the information to the wireless gateway. To stay within the abilities of the processor, the temperature is computed from a data table provided by the manufacturer. To reduce error, a variable resistor configuration is implemented over specified temperature ranges.


# **High Gain Antenna Option**


Monnit Wi-Fi sensors are also available with a detachable high gain antenna to provide a 20-30% increase in range over the standard Wi-Fi sensor. Option uses a different hardware configuration and must be choosen at time of purchase.



### Monnit Wi-Fi Sensor Electronics Specifications

- Power: 2 replaceable 1.5V "AA" batteries (included)
- Communication: 802.11 b/g (2.412 - 2.484 GHz)
- Wi-Fi Security: Open, WEP, WPA, WPA2
- Dimensions: 3.02" x 2.1" x 1.27"
- Transmission Range: Up to 100 ft. \*
- Battery Life: Up to 5 years.\*\*
- \* Actual range may vary depending on environment.
- \*\* Battery life is affected by sensor type, Wi-Fi security type, distance from Wi-Fi router, reporting frequency and other variables.



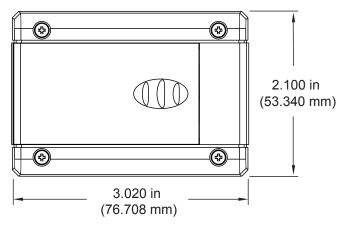

# Applications

- Ambient Temperature Monitoring
- Environmental Monitoring
- Smart Machines & Smart Structures
- HVAC Operation & Testing
- Data Center Monitoring

# The Leader in Low Cost Wireless Sensors

Technical Specifications		
Networking Standards	IEEE 802.11 b/g	
Frequency Band	2.412 - 2.484 GHz	
Wi-Fi Security Standards	Open, WEP, WPA, WPA2	
Wi-Fi Security Programming	Via PC software using USB cable. (Can be changed through iMonnit online software.)	
Network Settings	Auto DHCP/DNS or Static	
Data Logging	Standard - On Wi-Fi disruption, unit will log the first 50 readings and transmit when Wi-Fi connection is re-established. Premiere - Unit can record up to 50,000 readings and transmit when Wi-Fi is available.	
Power consumption	4uA sleep, 35mA active RX, 180mA TX (at +12dBm)	
Battery Life	Up to 5 years depending on sensor type, Wi-Fi security, distance from Wi-Fi router, reporting frequency and other variables. (Testing surpassed 90,000 transmissions until battery depletion.)	
Wi-Fi Data Rate	Auto configures to best rate for maximum range.	
Wireless Range	Up to 100 ft. device range (typical to standard Wi-Fi devices).	
Electronics Operating Temperature	Using Alkaline Batteries: -18°C to +55°C (0°F to +130°F) Using Lithium Batteries: -40°C to +85°C (-40°F to +185°F)	
LED Light	Status / activity	
Certifications	FCC ID: T9J-RN171. IC: RSS-210 low-power communication device. CE ID: 0681.	

Thermistor Specifications		
Thermistor Operating Range	-40°C to 125°C	
Accuracy @ 25°C	+/- 1%	
Resistance @ 25°C	10K ± 1%	
B-Constant (25°C – 50°C)	3380 ± 1%	
Permissive Operating Current @ 25°C	0.38 mA	
Rated Electric Power @ 25°C	15 mW	
Dissipation Constant @ 25°C	1.5mW/°C	
Time Constant @ 25°C	7 sec	

\* Hardware cannot withstand negative voltage. Please take care when connecting a power device.

\*\* At temperatures above 100°C, it is possible for the board circuitry to lose programmed memory.

#### **Caution/Notice:**

This product is designed for application in an ordinary environment (normal room temperature, humidity and atmospheric pressure). Do not use this sensor under the following conditions as these factors can deteriorate the product characteristics and cause failures and burn-out.; corrosive gas or deoxidizing gas - chlorine gas, hydrogen sulfide gas, ammonia gas, sulfuric acid gas, nitric oxides gas, etc.), volatile or flammable gas, dusty conditions, under low or high pressure, wet or excessively humid locations, places with salt water, oils chemical liquids or organic solvents, where there are excessively strong vibrations, other places where similar hazardous conditions exist.

Use this product within the specified temperature range. Higher temperature may cause deterioration of the characteristics or the material quality of this product.

For more information about our products or to place an order, please contact our sales department at 801-561-5555 or visit us on the web at <u>www.monnit.com</u>.

