

COW-





Features

- Replaceable Electrochemical Cell (sensor)
- Measuring ranges
 0-50 ppm, 0-100 ppm, 0-200 ppm or 0-300 ppm,
 selectable ranges with DIP switch
 on request 0-500 ppm and 0-1000 ppm
- Analog outputs 0-10 Vdc and 4-20 mA, on request 0-5 Vdc
- Response time
 1 sec, 5 sec, 30 sec or 60 sec,
 selectable with DIP switch
- · Zero-Span Calibration & Linear output
- Power supply 24 Vac/dc
- IP ratings IP65 for enclosure IP41 for probe
- Accuracy ±3 %
- t90 < 50 sec.
- Sensor life time 6 years expected

COW 1351:

• Two Outputs Output 1: 4-20 mA and Output 2:0-10 Vdc

COW 1351 MDR2B:

- Two Outputs Output1: 4-20 mA and Output 2:0-10 Vdc
- Modbus RS485 communication
- LCD Display
- · 2 x relay outputs, user can set any level
- Buzzer

COW 1351 and COW 1351 MDR2B are standard types, Other types on next page.

Application

For detection of Carbon Monoxide (CO) within a wide range of commercial applications such as:

Vehicle exhaust in parking structures (e.g. underground garages)

Engine repair shops, Tunnels, loading bays, Engine test benches, Shelters, Go-kart race courses, Etc.



Ordering codes

Mounting type	Range	Output 1	Output 2	"Options"	Advanced Options
COW = Wall IP65 enclosure	13 = 0-50 ppm 0-100 ppm	0 = no output	0 = no output	M = Modbus RS485	P = PID out
IP41 probe	0-200 ppm or 0-300 ppm	1 = 0-10 Vdc	1 = 0-10 Vdc	D = LCD display	T = RTC
	jumper selectable	2 = 2-10 Vdc	2 = 2-10 Vdc	$R = Relay \times 1$	L = Datalogger
	Selectable	3 = 0-5 Vdc	3 = 0-5 Vdc	,	
	310 = 0-100 ppm 0-300 ppm	4 = 1-5 Vdc		R2 = Relays x 2	
	0-500 ppm or	4 = 1-5 Vuc	4 = 1-5 Vdc	P = PID out	
	0-1000 ppm jumper selectable	5 = 4-20 mA	5 = 4-20 mA	B = Buzzer	

Ordering examples

Type no.	Description	
COW 1351	 Carbon Monoxide (CO) detector For wall mounting, IP65 enclosure and IP41 probe Range 0-50 ppm , 0-100 ppm, 0-200 ppm or 300 ppm, selectable ranges with DIP switch Two Outputs, Output 1: 4-20 mA and Output 2 : 0-10 Vdc 	COW 1351
COW 1351 MDR2B	 Carbon Monoxide (CO) detector For wall mounting, IP65 enclosure and IP41 probe Range 0-50 ppm, 0-100 ppm, 0-200 ppm or 300 ppm, selectable ranges with DIP switch Two Outputs, Output 1: 4-20 mA and Output 2: 0-10 Vdc Modbus RS485 communication LCD Display 2 x relay outputs, user can set any level Buzzer 	COW 1351 MDR2B
Notes:		

COW 1351 and COW 1351 MDR2B are standard types COW 1351 is the simple competitive type. COW 1351 MDR2B is the "full featured" type. Other types in ordering codes above can be supplied in minumum 25 pcs per each unique type. Relay and Buzzer options should be ordered with LCD option for installer to change the set values and relay actions anytime. For advanced options and special application contact us on info@vcp.se

Duct type available, see separate data sheet.

Room type are under development



COWseries

September 2020

Technical data

Power Consumption 15-35 Vdc Outputs Current Output Voltage Output 0-10 Vdc, minimum 1.000 Ω 0-5 Vdc, minimum 1.000 Ω Delay Output
Voltage Output 0-10 Vdc, minimum 1.000 Ω 0-5 Vdc, minimum 1.000 Ω
Relay Output max. rating 1A @ 220 Vac
Accuracy CO ±3 %
SensorSensing Element t90Electrochemical > 60 years expected DriftElectrochemical
CO ranges COW 13-types : 0-50 ppm, 0-100 ppm, 0-200 ppm or 0-300 ppm, selectable ranges with DIP switch COW 310-types: 0-100 ppm or 0-300 ppm, 0-500 ppm or 0-1000 ppm, selectable ranges with DIP switch
Response time 1 sec, 5 sec, 30 sec or 60 sec, selectable with DIP switch
ConnectionsX1-X2 TerminalsPluggable screw terminalX3 TerminalsFixed screw terminalCablemaximum 1.5mm2Cable GlandM16
Protection Enclosure IP65 or NEMA 4 Probe IP41 or NEMA 3
Standards EMC Directive EN 61326-1 CE Conformity CE1701
DimensionsEnclosure98.0 x 81.5 x 45.5 mm
Weight Packed 230 grams
Sensing Coverage area 400 m2
Display For COW types supplied with display the display type is LCD with visual area 25x40 mm



General Notes

- 1.. High density of some other gasses may effect the reading.
- 2.. Observe maximum permissible cable lengths.
- 3.. If cable runs parallel to the mains cable: Use shielded cables.
- 4.. Test only with certified calibration gasses.
- 5.. The cable entry always should have to be pointing downwards.
- 6.. The data indicated under 'Technical Data' apply only to vertically mounted transmitters.
- 7.. Wall type transmitters should have to be mounted in the center of wall but not near to any doors and windows.

Cross Sensivity

The values given are only for information and should not be used as a basis for cross calibration.

Cross sensivities may not be linear and should not be scaled either.

Datas based on gasing for 5 minutes using test equipment.


Test Gas	Test Gas Concentration	CO Equivalent
Carbon Monoxide	100 ppm	100 ppm
Hydrogen Sulfide	50 ppm	0 ppm
Sulphur Dioxide	20 ppm	0 ppm
Hydrogen	100 ppm	< 35 ppm
Nitric Oxide	50 ppm	< 10 ppm
Ethanol	200 ppm	< 1 ppm
Ammonia	50 ppm	0 ppm
Chlorine	15 ppm	< 1 ppm
Ethylene	100 ppm	96 ppm




DIP Switch Settings

- 1.. Please check if there is any special instruction on the enclosure or inside the cover
- 2.. For any calibration, please choose 1 sec. response time for faster measurements


COW 13-typesDIPStandard Ranges $\boxed{1234}$ 50 ppm $\boxed{1234}$ 100 ppm $\boxed{1234}$ 200 ppm $\boxed{1234}$ 300 ppm

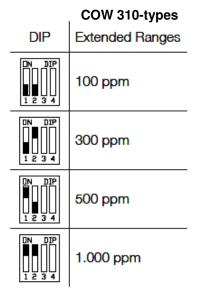

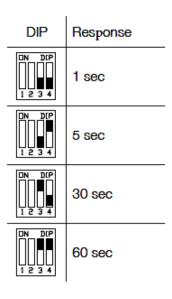


Electrical Connections

- 1.. Please be sure about current direction for current outputs and polarity for voltage outputs.
- 2.. Relay contact is Normally Open and rating is max. 1A at 230VAC
- 3.. We kindly advise using 24V for avoiding high voltage harmonics and external power relay for bigger loads
- 4.. Please use shielded and twisted paired cables for Modbus connections
- 5.. Please observe RS485 termination rules, max. 32 devices in a single Modbus line

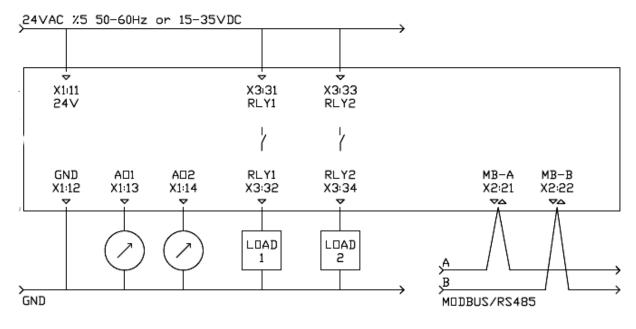




Transmitter Hardware

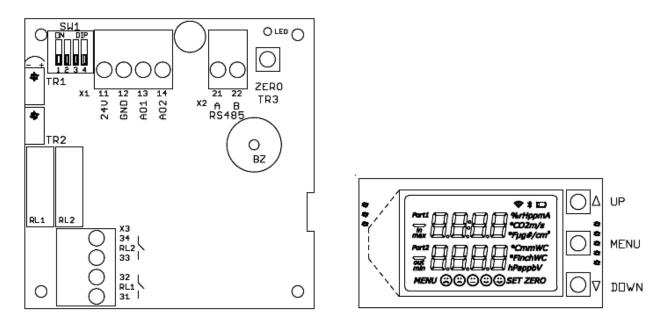

SW1	DIP Switch for configuration range and response time		
X1 TERMINAL			
11 12 13 14	24V GND AO1 AO2	1535 Vdc or 24 Vac (± %5, 50-60 Hz) ground for power and reference for outputs analog output 1 analog output 2	
X2 TERMINAL			
21 22	A / RS485 B / RS485	modbus communication positive pair modbus communication negative pair	
LED	bead LED, periodically lights ON and OFF modbus communication, blinks when there is a communication		
TR1	not used		
TR2	not used		
ZERO / TR3	not used		
RL1 & RL2	relay 1 and	relay 2	
BZ	buzzer		
X3 TERMINAL			
31 32 33	NO - RL1 NO - RL1 NO - RL2	relay 1 dry contact max. rating 1A @ 220 Vac relay 1 dry contact max. rating 1A @ 220 Vac relay 2 dry contact max. rating 1A @ 220 Vac	
24	NO - RI 2	relay 2 dry contact max, rating 1A @ 220 Vac	



Display and Buttons

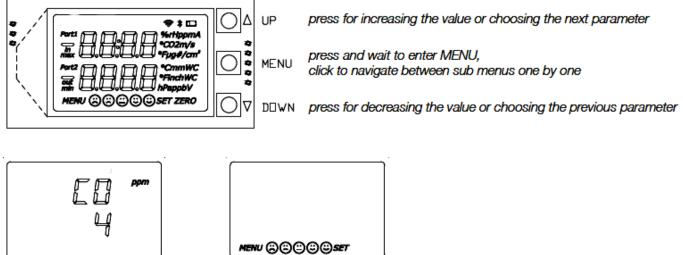


main screen transmitter is working

keep pressing MENU button until seeing SET


transmitter is not working in MENU mode

Parameters for Relay and Buzzer


Main Screen >> r1 L >> r1 H >> r1 A >> r2 L >> r2 H >> r2 A >> B L >> B H >> B A >> Main Screen




LOW set point for Relay 1




HIGH set point for Relay 1




ACTION selection for Relay 1




LOW set point for Relay 2




HIGH set point for Relay 2




ACTION selection for Relay 2



LOW set point for Buzzer



HIGH set point for Buzzer



ACTION selection for Buzzer



Actions for Relay and Buzzer

	action 0, valid for relays and buzzer, relay contact is always OPEN buzzer is always SILENCE
	action 1, valid for relays and buzzer, relay contact is CLOSED between points, OPEN under LOWpoint and OPEN over HIGHpoint buzzer is WARNING between points, SILENCE under LOWpoint and SILENCE over HIGHpoint
	action 2, valid for relays and buzzer, relay contact is OPEN between points, CLOSED under LOWpoint and OPEN over HIGHpoint buzzer is SILENCE between points, WARNING under LOWpoint and SILENCE over HIGHpoint
	action 3, valid for relays and buzzer, relay contact is CLOSED over HIGHpoint, OPEN under LOWpoint, hysterisis between points buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint, hysterisis between points
- <u>D</u> _4	action 4, valid for relays and buzzer, relay contact is OPEN over HIGHpoint, CLOSED under LOWpoint, hysterisis between points buzzer is SILENCE over HIGHpoint, WARNING under LOWpoint, hysterisis between points
:-: <u>-</u>	action 5, valid only for buzzer, buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint, buzzer is WARNING intermittently between points,
===6	action 6, valid only for buzzer, buzzer is WARNING under LOWpoint, SILENCE over HIGHpoint, buzzer is WARNING intermittently between points,
61]	action 7, valid only for buzzer, buzzer is following relay 1 contact, buzzer is WARNING when relay 1 contact is CLOSED, SILENCE when the contact is OPEN
rð B	action 8, valid only for buzzer, buzzer is following relay 2 contact, buzzer is WARNING when relay 2 contact is CLOSED, SILENCE when the contact is OPEN



Wall Mounted Carbon Monoxide (CO) Gas Detector COWseries September 2020

Cont.. Actions for Relay and Buzzer

ACTIONS	under LOW	between LOW & HIGH	over HIGH
0:0.0.0	Open / Silence	Open / Silence	Open / Silence
1 : 0.1.0	Open / Silence	Closed / Warning	Open / Silence
2 : 1.0.1	Closed / Warning	Open / Silence	Closed / Warning
3 : 0.X.I	Open / Silence	Hysteresis	Closed / Warning
4 : I.X.0	Closed / Warning	Hysteresis	Open / Silence
5 : 0I	Silence	Pre Alarm	Warning
6 : I0	Warning	Pre Alarm	Silence
7 : =r1	Silence when RL1 is Open, Warning when RL1 is Closed		
8 : = r2	Silence whe	n RL2 is Open, Warning when Rl	2 is Closed

0 : Relay Contact is OPEN, Buzzer is in Silent mode

I : Relay Contact is CLOSED, Buzzer is in Warning mode

X : Relay Contact is at HYSTERESIS position, OPEN if previous position open, CLOSED if previous position closed : Buzzer is in HYSTERESIS mode, Silent if previous mode is silent, Warning if previous mode is warning

- : Buzzer is in PRE ALARM mode, Buzzer is warning intermittently



COWseries September 2020

Modbus RS485 Protocol

Default Settings: Modbus ID:1, 9600, 8bit, None, 1. Register Table starts from Base 1.

Use Function 3 for Reading and Function 6 for Writing Holding Registers.

Whenever writing to any Modbus Parameter,

new parameter is activated instantly and you should have to configure master device according to new parameters.

For every reboot/initializing, Modbus is activated with default parameters for 3 seconds.

After 3 seconds, Modbus is reconfigured according your parameter settings.


Unlisted registers are for analog output calibrations and some system parameters.

Please do not change unlisted registers..

Register	R/W	Range	Description
1	R&W	1254	Modbus Address
2	R&W	04	Baudrate, 0: 9.600, 1: 19.200, 2: 38.400, 3: 57.600, 4: 115.200
3	R&W	03	Bit_Parity_Stop, 0: 8bit_None_1, 1: 8bit_None_2, 2: 8bit_Even_1, 3: 8bit_Odd_1
4	R	01.000	CO level as ppm
5	R	010.000	CO level as ppm x10, divide by 10 for exact value
6	R	0 or 1	Relay 1, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
7	R	01.000	Relay 1, LOW point
8	R	01.000	Relay 1, HIGH point
9	R	04	Relay 1, ACTION
10	R	0 or 1	Relay 2, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
11	R	01.000	Relay 2, LOW point
12	R	01.000	Relay 2, HIGH point
13	R	04	Relay 2, ACTION
14	R	0 or 1	Buzzer, 0: OK-Silence, 1: PreAlarm - warning intermittently, 2: WARNING continuously
15	R	01.000	Buzzer, LOW point
16	R	01.000	Buzzer, HIGH point
17	R	04	Buzzer, ACTION



Calibration - General Information)

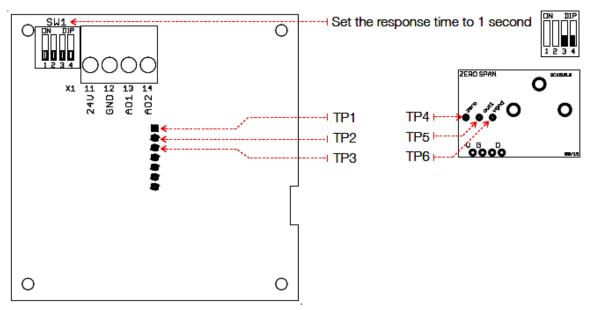

Before the process;

- 1. Please keep the unit working for minimum 10 minutes at fresh air for settling the baseline.
- 2. Please use certified calibration CO Test Gasses.
- 3. Please use a precision multimeter,

Θ is showing Negative/Reference Point,

⊕ is showing Positive Measurement Point.

- 4. Set the best range according to calibration gas.
- 5. Single point calibration is enough for any range.
- 6. Calibration steps: Check the typical values, Set ZERO, Set SPAN.

Check Typical Values

- 1. TP2⊖ vs TP1⊕ is about 5 VDC
- 2. TP2⊖ vs TP6⊕ is about 455 mV DC
- 3. TP6⊖ vs TP5⊕ is lower than 5 mV DC

ZERO Calibration

- 1. Use ZERO Trimmer for setting below values,
- 2. TP2⊖ vs TP4⊕ should be closest to 455 mV DC,
- 3. TP6⊖ vs TP4⊕ should be closest to 0 VDC,
- 4. TP6⊖ vs TP3⊕ should be closest to 0 VDC,

SPAN Calibration


- 1. Use SPAN Trimmer for calibration.
- 2. Before applying the Test Gas, measure output as AO1⊕ vs GND⊖, should be very close to 0ppm.
- 3. Apply the test gas for min. 1 minute with 0.5 lt/min. flow rate,
- 4. Start calibration with SPAN trimmer,
- 5. Analog output should show the test gas concentration value (AO1⊕ vs GND⊖).
- 6. Applying test gas for 3 minutes is enough for a standard calibration.
- 7. For best calibration, you can apply the test gas for 5 minutes.
- 8. Applying the test gas for longer and for many times, reduces the CO Sensing Element life.



COWseries Septen

September 2020

Dimensions (mm)

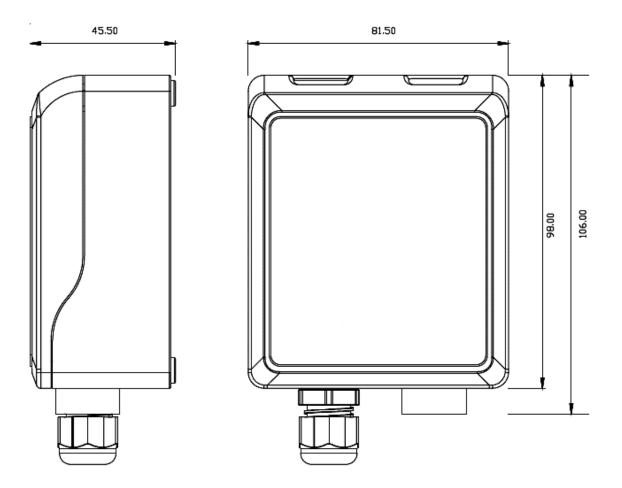

We reserve the right to make changes in our products without any notice which may effect the accuracy of the information contained in this leaflet.